

HOW TO APPLY WIZZ! FOR MAXIMUM PERFORMANCE

Follow these 5 simple steps to create a hydrophilic layer that reduces drag and helps you move faster through the water.

SurfDek



APPLY WITH A CLEAN, DRY CLOTH

1 CLEAN THE SURFACE



Remove any dirt, wax, oil, or residue.

Use a clean cloth and mild cleaner if needed.



A CLEAN SURFACE ENSURES BEST RESULTS

2 APPLY WIZZ!



Apply a splash of Wizz! to a clean, dry cloth.


Rub into the surface using overlapping strokes.

Use enough to lightly wet the cloth.



RUB INTO THE SURFACE FOR EVEN COVERAGE

3 LEAVE TO AIR DRY 15 MINUTES

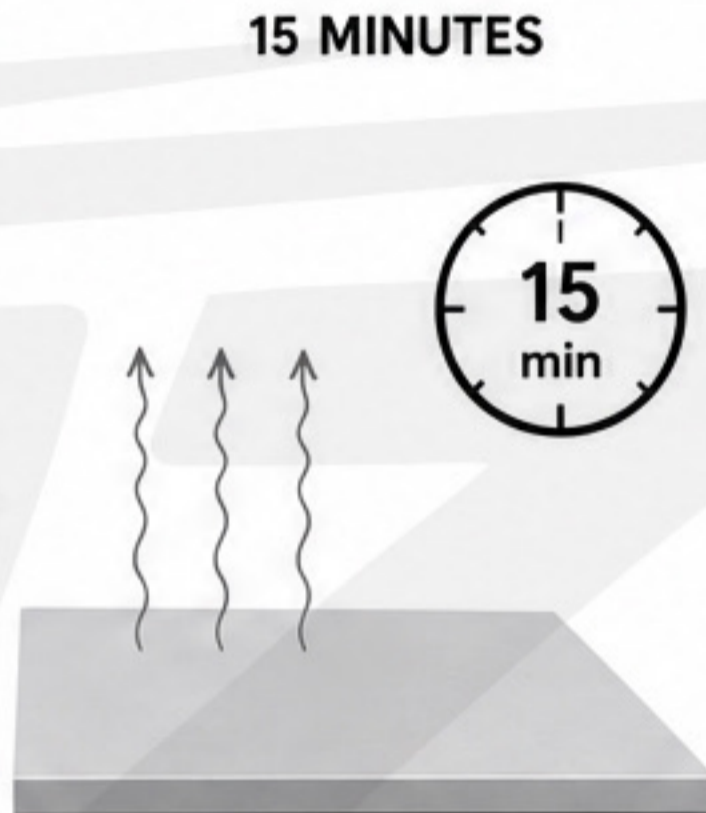

Let the surface air dry undisturbed for 15 minutes.

Do not wipe off.



DRYING TIME ACTIVATES THE HYDROPHILIC LAYER

4 APPLY WIZZ! AGAIN




Apply a second coat of Wizz! using a clean, dry cloth.

Rub into the surface using overlapping strokes.



BUILDING LAYERS ENHANCES DURABILITY

5 LEAVE TO AIR DRY A FURTHER 15 MINUTES

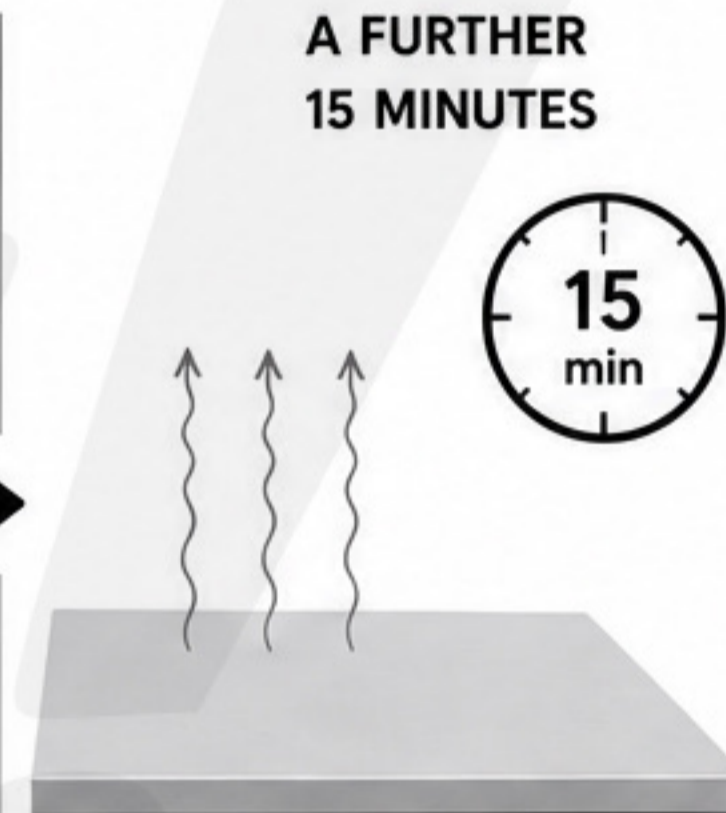

Let the second coat air dry for another 15 minutes.

Your surface is now ready for peak performance!



YOU'RE READY TO GO ENJOY LESS DRAG & MORE SPEED!



KEY TAKEAWAY:

Two thin coats of Wizz! create a strong, long-lasting hydrophilic layer that reduces drag and helps you move faster through the water.

BEST PRACTICES:

- Apply in a clean, dry environment
- Reapply as needed for consistent performance
- Avoid touching the surface between coats
- Store Wizz! in a cool, dry place